


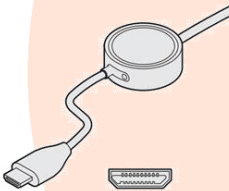



media:scape Reference

Glossary

General Information	
	media:scape Display The display screen is where your content will be shown when connected to the Media:scape device.
	media:scape Well The well contains all the parts necessary to connect to the media:scape display. It also has plus sockets available. The reset button for the media:scape display is located in the well.
	media:scape Puck Each connected user has their own puck. The puck can be used to switch between the device that is being shown on the media:scape display.
	HDMI Cable / Port You will connect to the media:scape display through HDMI. Most modern laptops have an HDMI port built in. If you are connecting with a mobile device or a laptop without an HDMI port, you will have to use a converter.
	HDMI Converter An HDMI converter will let you connect to the media:scape displays (if you don't have an HDMI slot) using the ports you already have on your device. All devices are different; converters can be purchased at any major electronics realtor. If you're unsure which converter to purchase, contact Lisa Dise.

Connecting to the media:scape display

The **media:scape display** only shows what is on one device's screen at a time, it does not allow for real time collaboration on work between devices.

Step 1: Connect your device to the **media:scape display**.

- Using the **Puck** found inside the **Well** connect the cable to your **HDMI port**.
 - If you do not have an HDMI port, you will need to use a **converter**.

Step 2: Turn on the **media:scape puck**.

- Press the number highlighted on the **puck** that is connected to your device.
 - The numbers displayed on the pucks are in order of connectivity.

Step 3 (optional): Switch between devices displayed.

- Connect the device to the **media:scape display** and press the highlighted number on the **puck**. The display will now change to the new device.

Your device screen should now show on the **media:scape display**.

Troubleshooting the media:scape display

Display is distorted, stretched or not displaying screen properly

If the display is not functioning properly, you will need to reset the device. To reset the **media:scape display**, simply press the small white button located inside the **well**. The display will restart and the display should be back to normal.

Puck not lighting up when plugged in

When initially connecting your device to the **media:scape display**, the **puck** may sometimes not light up with your number to connect. If this happens, disconnect the **puck** and try again.

